



● Connect Bantam2 to Wi-Fi before checking for or installing an update.

PART 1 CONNECT TO WI-FI

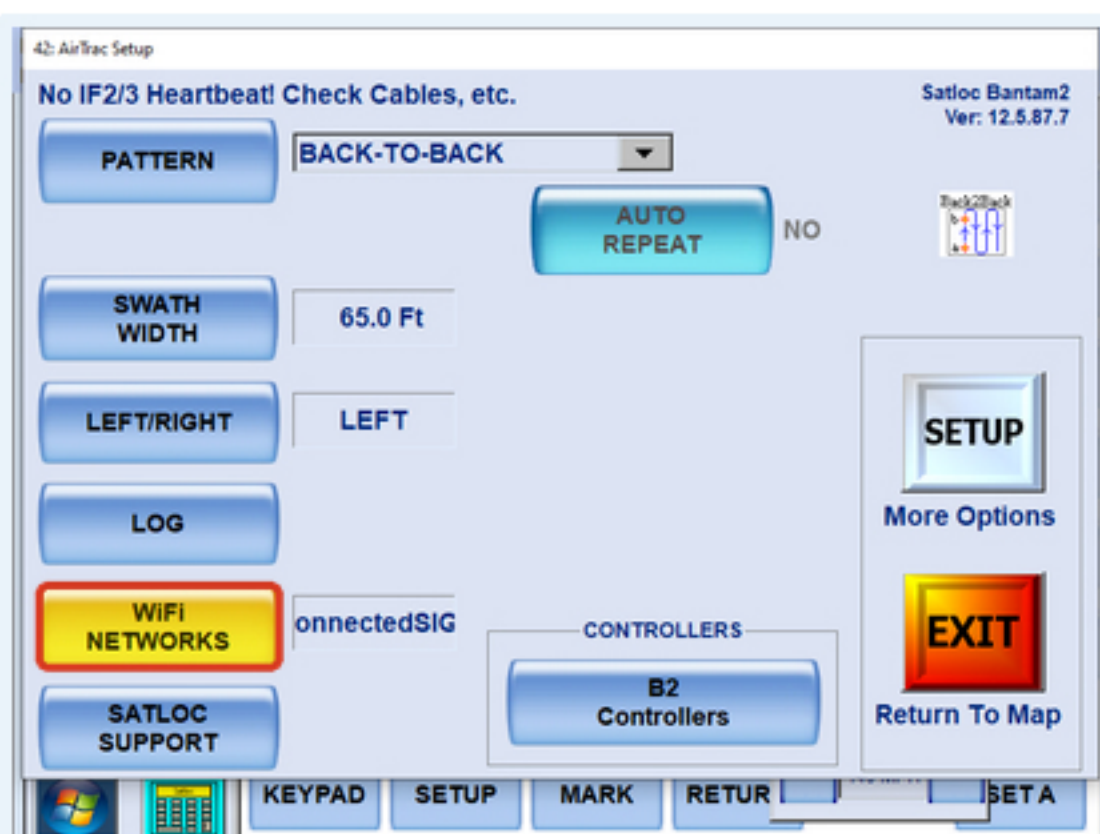

1 Open Wi-Fi Networks

From the AirTrac Setup screen, tap WiFi Networks.

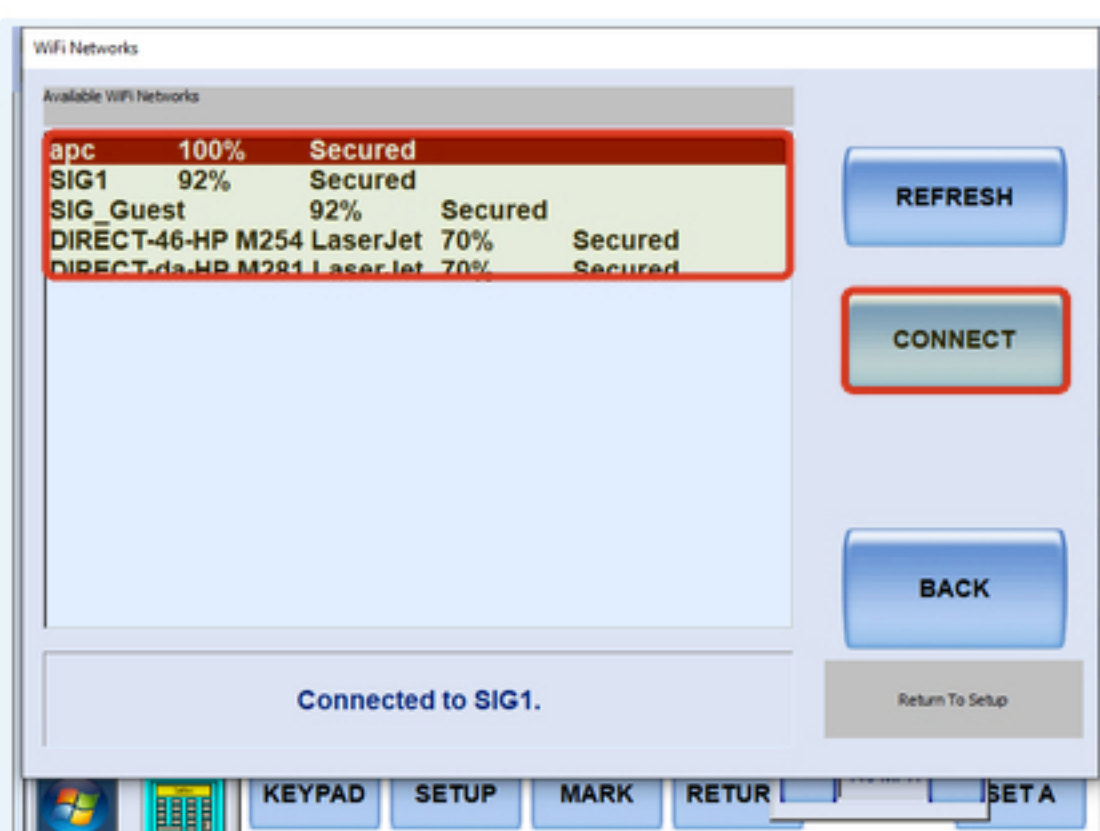

2 Choose a network

Select the network name, then tap CONNECT. Tap REFRESH if it is not listed.



3 Enter the password


Type the Wi-Fi password and tap Accept. Confirm Connected to [network], then tap BACK.

PART 2 INSTALL THE UPDATE




1 Open Settings

At the Bantam2 launcher, look for Update Available, then tap Settings.

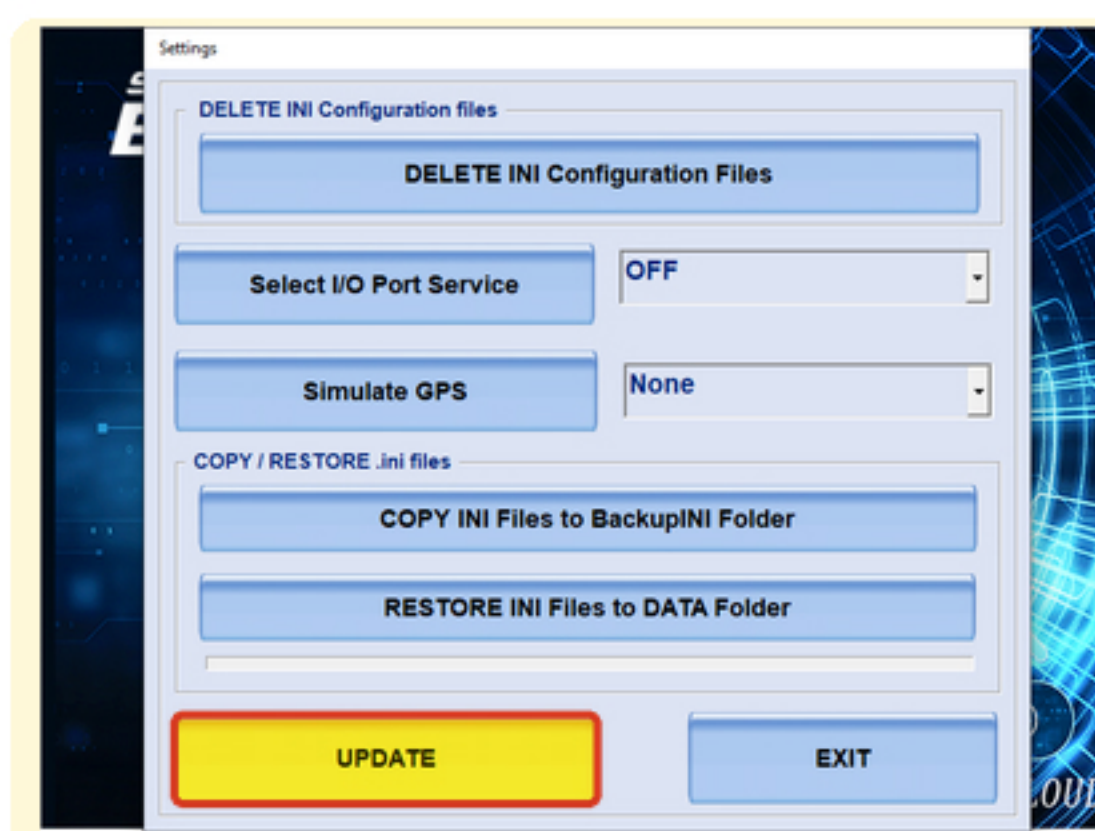

2 Open the updater

On the Settings screen, tap the yellow UPDATE button.

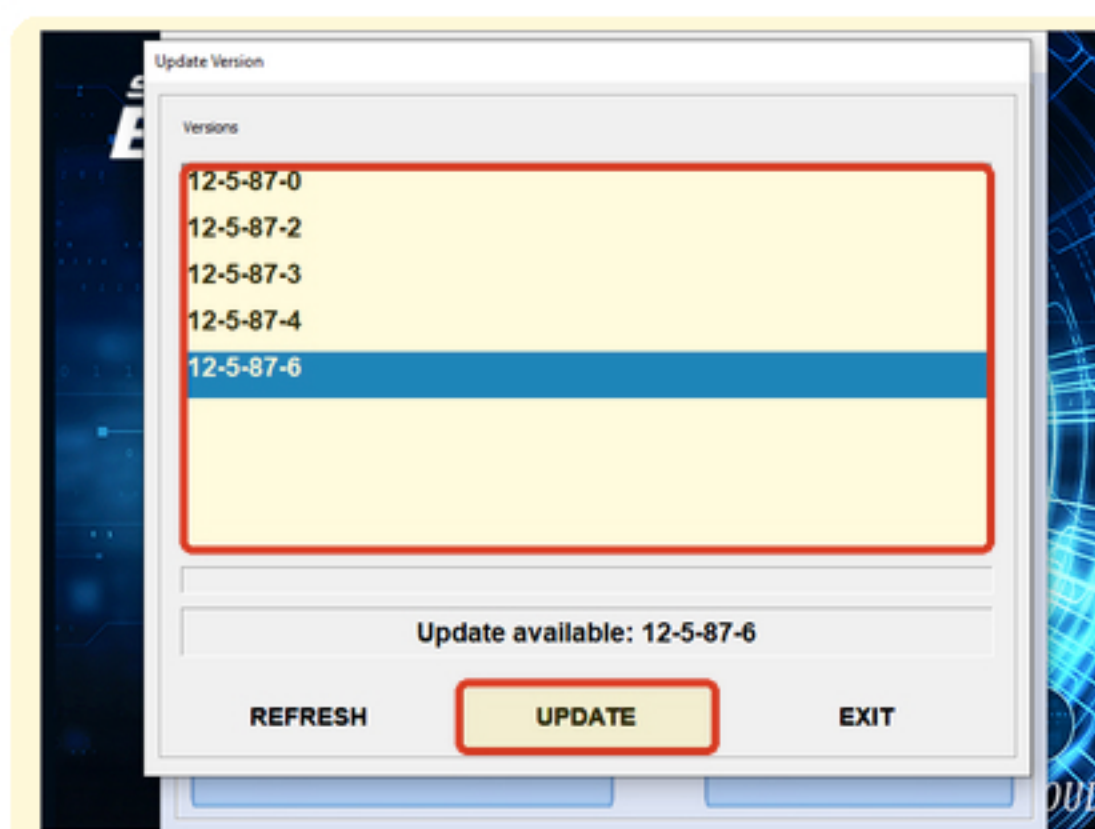

3 Install the newest version

Select the newest version shown and tap UPDATE. Keep power and Wi-Fi connected until it finishes.